



SANGFOR

SD WAN

BBC 2.5.2 Deployment Guide

Version BBC2.5.2



Change Log

Date	Change Description
Dec 05, 2018	Introduction of BBC 2.5.2 deployment

CONTENT

Chapter 1 Deployment Resource	4
Chapter2 BBC Deployment Instruction.....	5
2.1 BBC environment deployment	5
2.2 Deployment steps.....	6

Chapter 1 Deployment Resource

Testing Material Name	Instruction
BBC installation package	<p>BBC installation package download address: BBC2.5.0_20180630.ova: https://drive.google.com/open?id=1oKNxq8r12nSwHLb_XzKvDznZBNH_3IdR</p> <p>BBC2.5.1EN(20180918).pkg: https://drive.google.com/open?id=1wxnmMgk8ChgCaGtQ7yRG0Z04dxJp2eGd</p> <p>BBC2.5.2_B(20181108-151614).pkg: https://drive.google.com/open?id=1_66bbPMILpjGGSFvGCJmZYFK1kuq_20</p> <p>Note: BBC2.5.0_20180630.ova is a Chinese version BBC, You need to execute one command in the BBC backend to convert to the English version.</p>
BBC Sofeware platform	Ova Virtualization Deployment (Vmware, Sangfor aCloud)
License Key	Currently, the test serial number authorization can only be applied through China domestic mobile number. If the local office requires test, you could seek for China local office personnel or CTI personnel to assist on the application.


Chapter2 BBC Deployment Instruction

2.1 BBC environment deployment

BBC Center device only supports single-arm deployment.

Connect the LAN port to the internal network core switch.

Port mapping is required on the front gateway device to map the TCP/UDP port 5000.

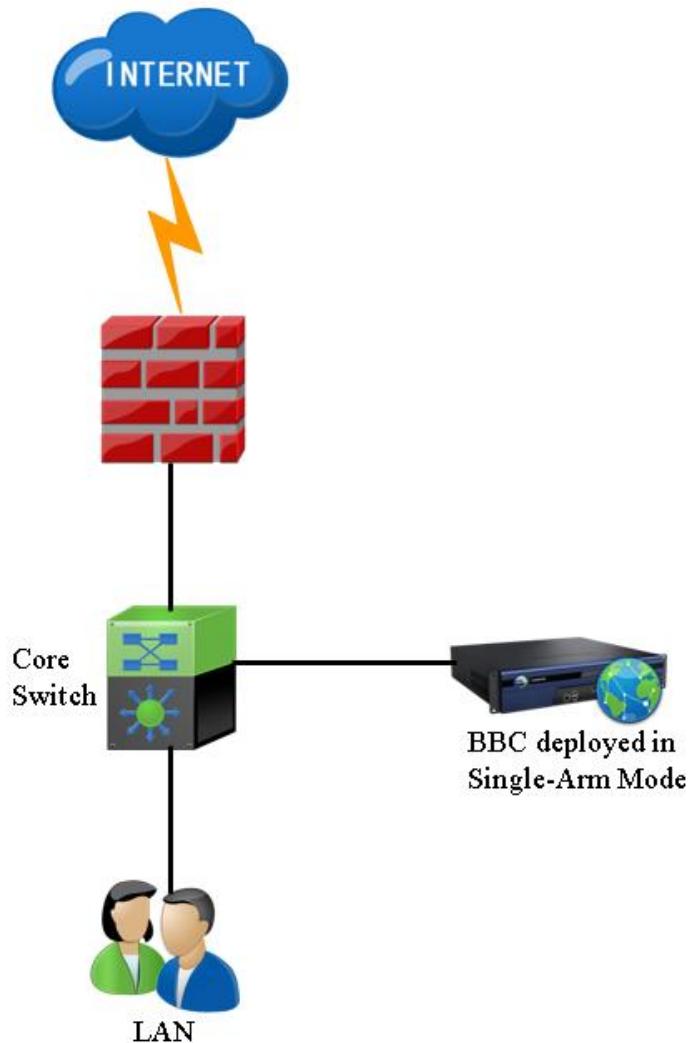

BBC only supports single-arm deployment, but there are two supported modes:

1. Ova Virtualization Deployment (Vmware, Sangfor aCloud)
2. Hardware BBC device

Note:Recommended ova mode deployment


BBC deployment reference specification as follows:

Specification Type	CPU	Memory	System Hard Disk	Data Hard Disk
Testing Lowest Specifications	8 Core	8G	240G	500G
Testing Recommended Specifications	8 Core	16G	240G	500G
Enterprise Recommended Specifications	8 Core	32G	240G	500G


2.2 Deployment steps


1. Import BBC2.5.0_20180630.ova image into aCloud or Vmware, and then configure an IP address for the BBC (Notes: This BBC is a Chinese version)

The following picture shows the location of the aCloud import BBC ova image. Import operations can be done according to the aCloud wizard prompts

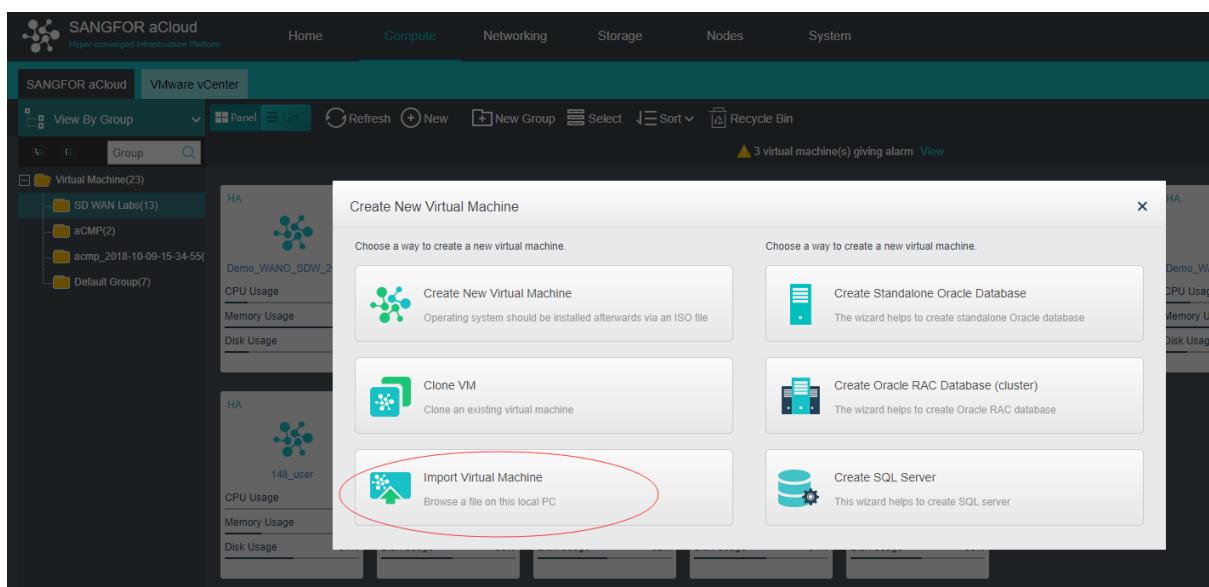


After the BBC is imported into aCloud, you need to link the first NIC of the BBC to the virtual network.

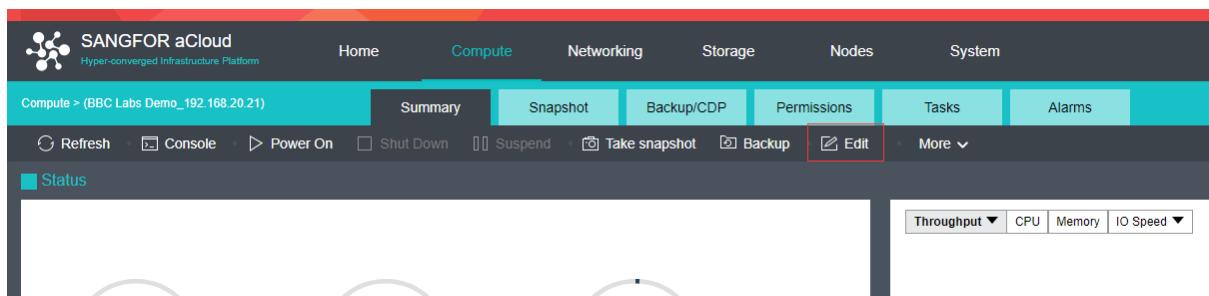

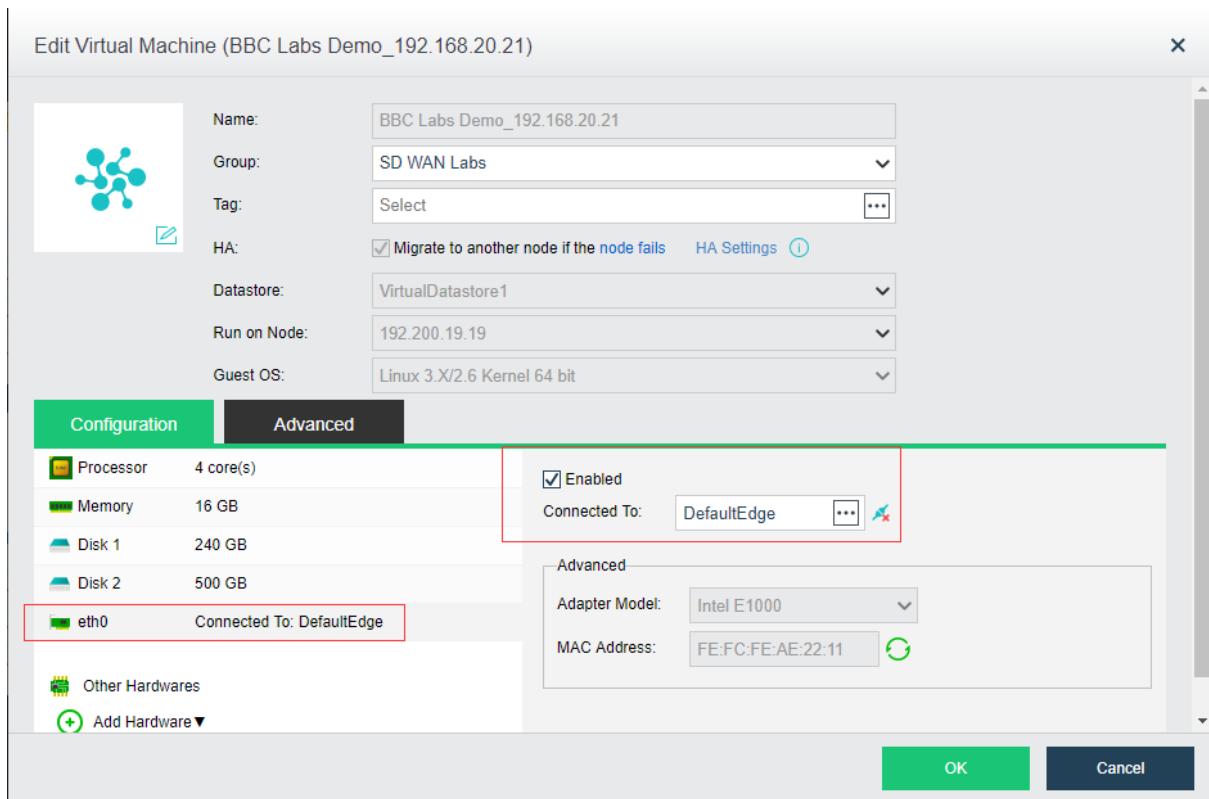


You need to power on the BBC at last:

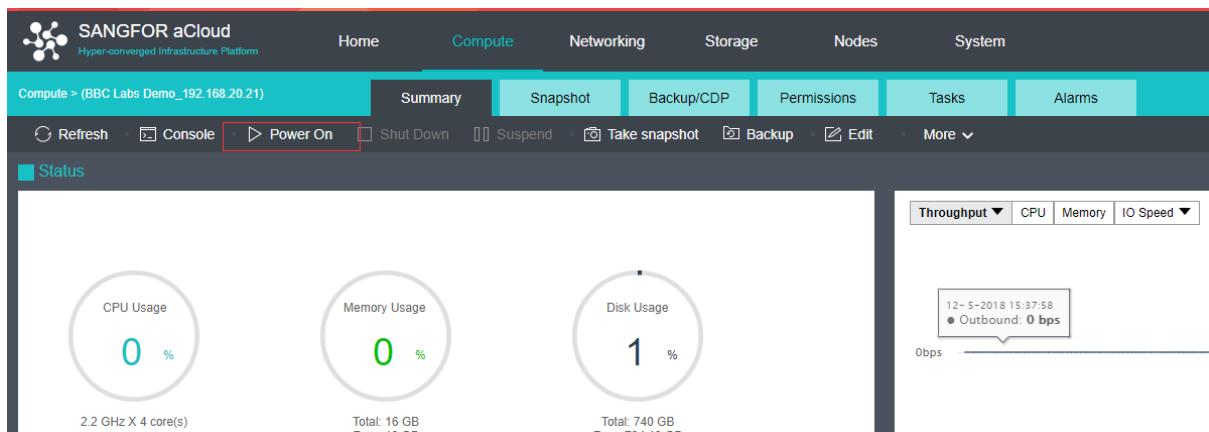

Then, You need to login to the BBC background to configure the BBC LAN port IP address. The steps are as follows:

- (1) Click **Console** on the BBC virtual machine management interface to enter the BBC background interface, as shown below :

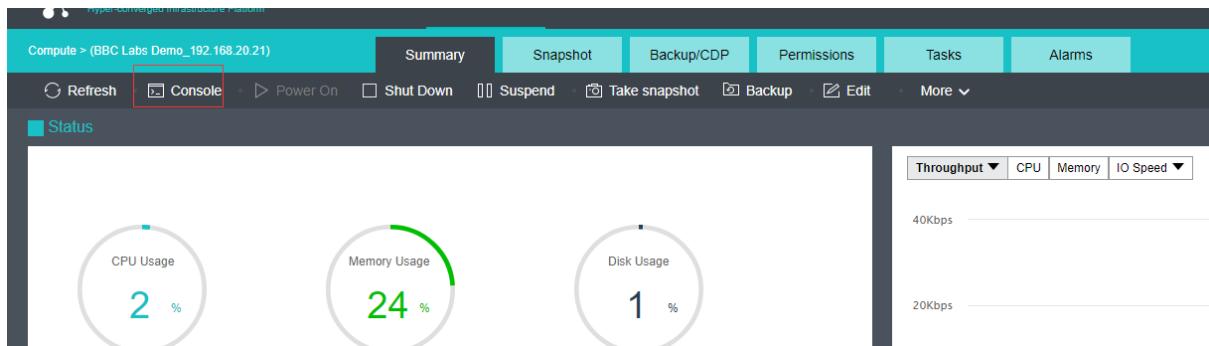

(2) Log in with the following account: root/aminsangfornetwork

```
Welcome to the SANGFOR BBC
https://10.250.0.7

host-fefcfe704a2e login: root
Password:
Sangfor:aSV/host-fefcfe704a2e /sf #
Sangfor:aSV/host-fefcfe704a2e /sf #
Sangfor:aSV/host-fefcfe704a2e /sf #
```

(3) Using the command of ifconfig to configure the BBC LAN port IP according to your plan. We configure the BBCLAN port IP as 192.168.20.21 in this case:

Command1: ifconfig eth0 192.168.20.21 netmask 255.255.255.0

Command2: route add default gw 192.168.20.1

```
Welcome to the SANGFOR BBC
https://10.250.0.7


host-fefcfe704a2e login: root
Password:
Sangfor:aSV/host-fefcfe704a2e /sf #
Sangfor:aSV/host-fefcfe704a2e /sf #
Sangfor:aSV/host-fefcfe704a2e /sf # ifconfig eth0 192.168.20.21 netmask 255.255.
255.0
Sangfor:aSV/host-fefcfe704a2e /sf # route add default gw 192.168.20.1
Sangfor:aSV/host-fefcfe704a2e /sf #
```

(4) Login BBC with IP 192.168.20.21.

Login address : <https://192.168.20.21>

Notes: BBC2.5.0_20180630.ova is a Chinese version BBC, You need to upgrade the BBC to 2.5.2 and then execute one command in the BBC backend to convert to the English version

Log in with the following account: admin/admin

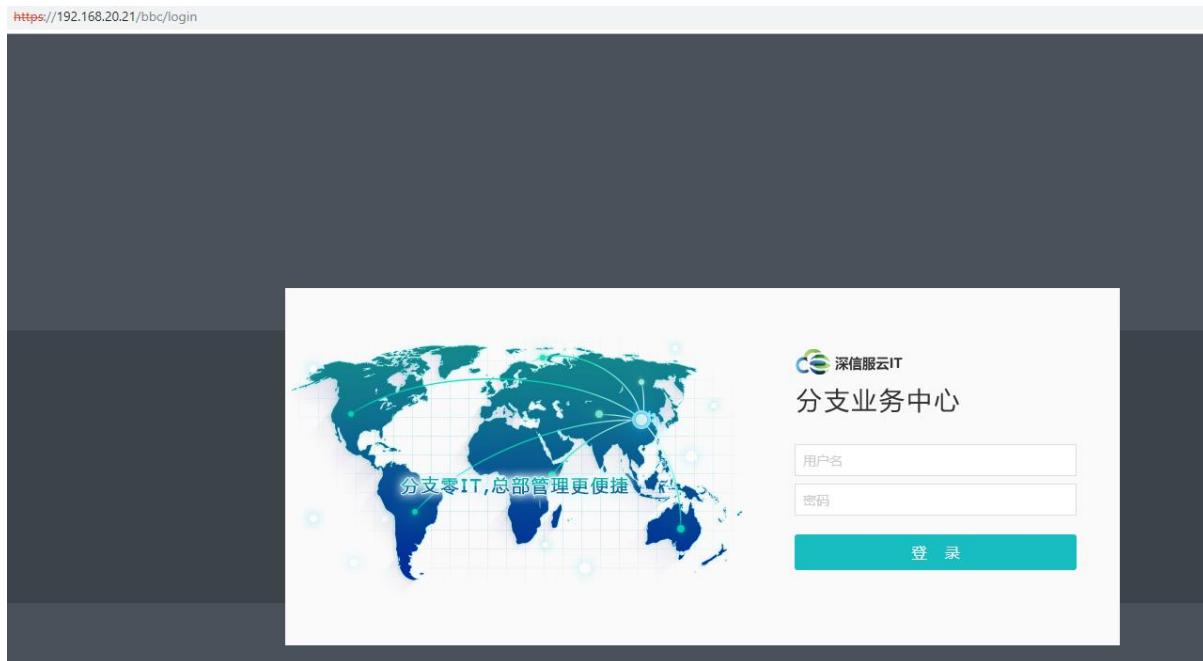


Log in to the BBC console to reconfigure the BBC LAN interface IP address :

Step:

(1) The console page jumps to the network configuration page as shown below :



(2) Reconfigure the LAN interface IP address:

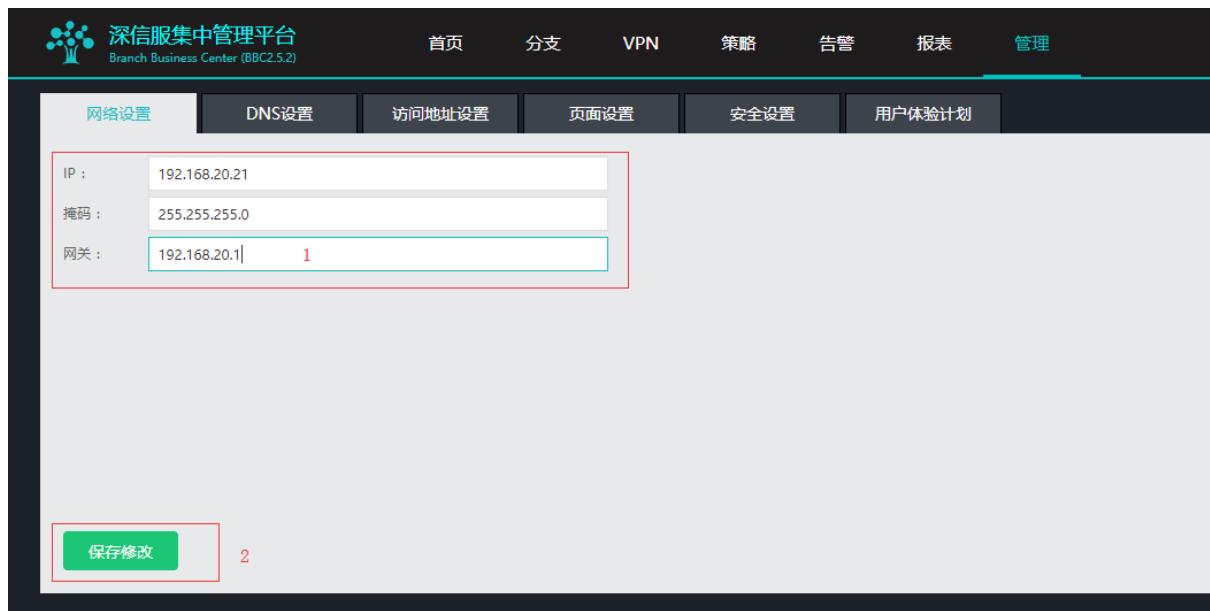

2. Upgrade the BBC.2.5.0 to BBC 2.5.2_EN


BBC2.5.2_B(20181108-151614).pkg:

https://drive.google.com/open?id=1_66bbPMILpjGGSFvGCJmZYFK1kuq_20

Path :【管理】 -- 【设备升级】



Click the button shown below to load the upgrade package and upgrade to BBC2.5.2.

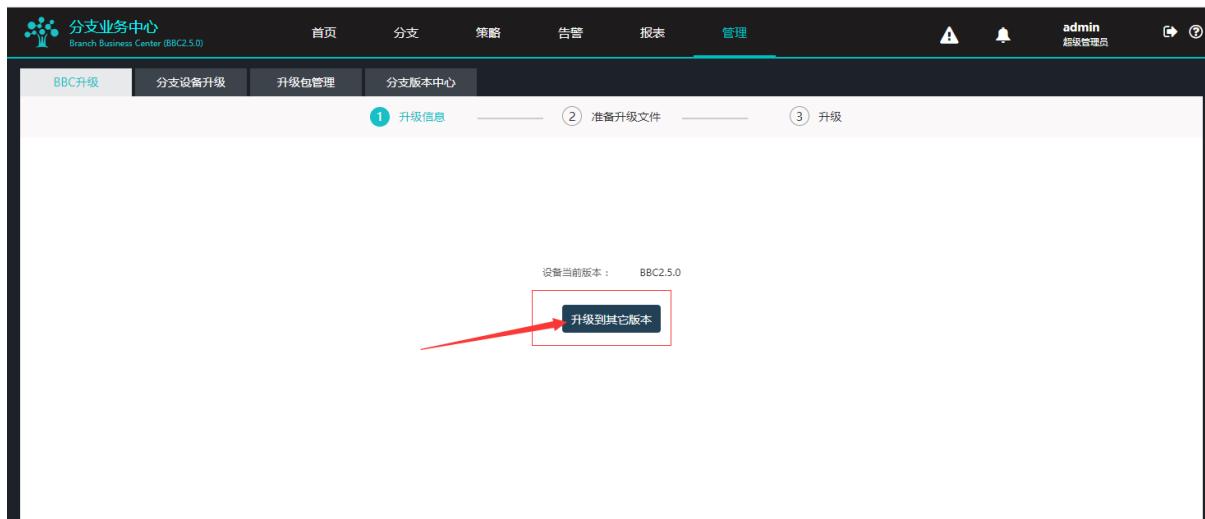


Upload the upgrade package:



After uploading the upgrade package, click the button below to start the upgrade :



After the upgrade is complete, click the button below to restart the BBC device :

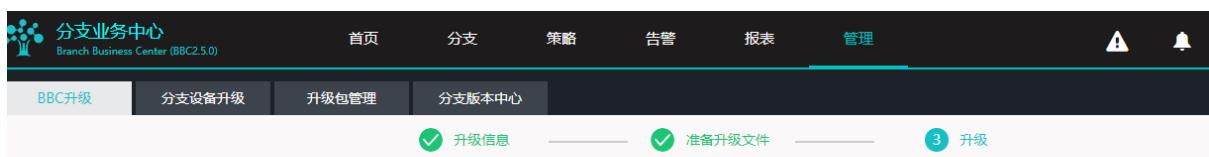

3. Log in to the BBC background and execute the following command to convert the BBC to English version.

Command1: switch_i18n.py en_US

Command2: reboot


```
Sangfor:aSV/host-fefcfe704a2e /sf # switch_i18n.py en_US
Switch to English [en_US] environment
i18n will be ok after reboot
Sangfor:aSV/host-fefcfe704a2e /sf #
```

```
tion will be ok after reboot
Sangfor:aSV/host-fefcfe704a2e /sf # reboot
[ 1799.685194] [watch_reboot]: get reboot(1) at 4295342218.....

Message from syslogd@host-fefcfe704a2e at Dec 5 19:42:33 ...
  kernel:[ 1799.685194] [watch_reboot]: get reboot(1) at 4295342218.....

The system is going down for reboot NOW!04a2e (tty1) (Wed Dec 5 19:42:33 201
INIT: Switching to runlevel: 6
INIT: Sending processes the TERM signal
[ ok ] Stopping cron: : OK!.
[....] Stopping sdog: : OK!_
```

After restarting, BBC becomes English version:

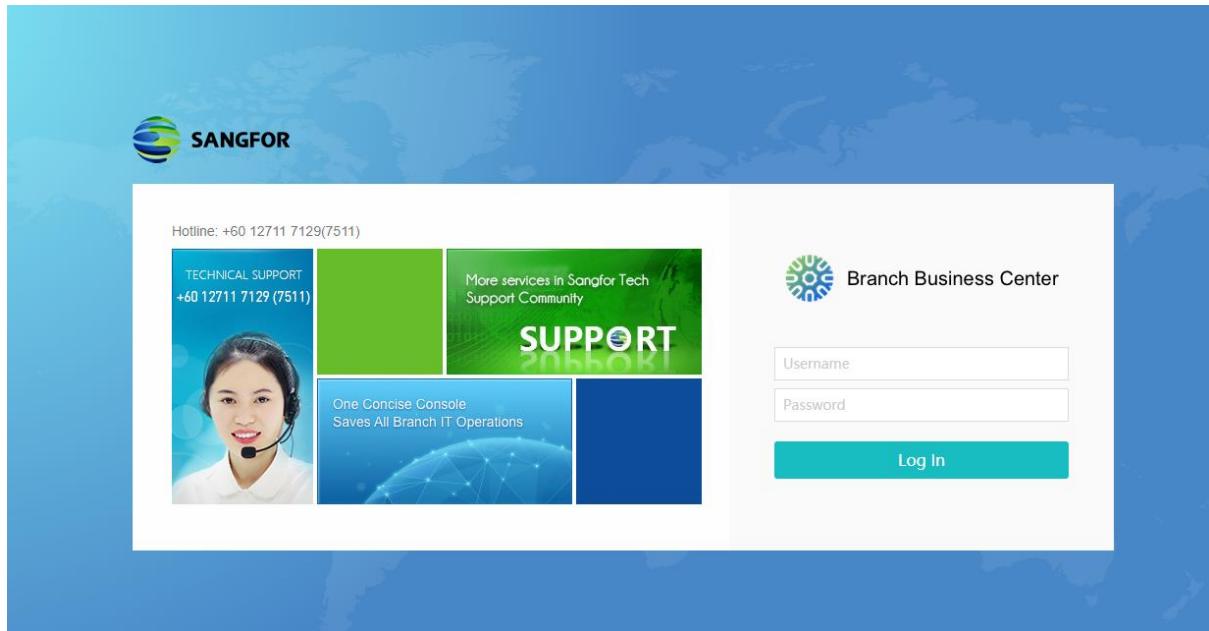

4. License Key: Currently, the test serial number authorization can only be applied through China domestic mobile number. If the local office requires test, you could seek for China local office personnel or CTI personnel to assist on the application.

A screenshot of the Sangfor Branch Business Center (BBC) System dashboard. The top navigation bar includes "Sangfor Branch Business Center" (Branch Business Center (BBC) 3.2), "Home", "Branch", "VPN", "Policies", "Alarms", "Report", and "System" (which is highlighted with a red border). Below the navigation, there are several management icons: "License Key" (Purchase license to gain better after-sale services), "Date and Time" (Set date and time, or sync time with NTP server), "Sub Administrators" (Create sub administrator accounts), "System Settings" (Change system settings to cater to needs of different scenarios), "Alarm Options" (Specify alarm-triggering events, threshold and delivery method), "System Backup and Restore" (Back up logs and system configuration, and restore system to factory defaults), "Tasks and Alarms" (Operational logs and system), "Shut Down and Restart" (Shut Down and Restart), and "Upgrade" (Keep your BBC software up to date).

5. Dnat: Port mapping is required on the front gateway device to map the TCP/UDP port 5000



Copyright © SANGFOR Technologies Inc. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of SANGFOR Technologies Inc.

SANGFOR is the trademark of SANGFOR Technologies Inc. All other trademarks and trade names mentioned in this document are the property of their respective holders. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute a warranty of any kind, express or implied.

The information in this document is subject to change without notice.

To obtain the latest version, contact the international service center of SANGFOR Technologies Inc

